

# ACTIVESHOP<sup>®</sup>

## Instructions for use

Gabbiano Head Spa Couch 017



### Importer:

ACTIVESHOP Sp. z o.o.  
Ul. Graniczna 8b, building  
DC2A 54-610 Wrocław,  
Poland

[www.activeshop.com.pl](http://www.activeshop.com.pl)

Rev. A/06/2025



Scan for  
different  
languages



## Mounting

1. Unscrew the metal casing located at the back of the couch.



2. Connect the hot and cold water hoses to the water system.



3. Install the drain tube at the location shown in the picture.



4. Connect the tube to the steam generating device as shown in the illustration.





**Attention!**

The tube is designed to drain steam, not to supply water. Water should be poured directly into the steam generating device.

**Usage:**

1. Pour water into the bowl so that its level is 5cm above the filter. Starting the device without water may damage it.



2. After connecting the power supply, press the , "on" button to start the water circulation. With the "Up" button you increase the temperature, "Down" you decrease it, and the "Lighting" button turns on the lighting .



3. The red switch adjusts the water pressure, allowing you to adjust it to your needs.



4. To perform a hair sauna treatment, cover the bowl with a steam dome, and then turn on the steam-generating device. To perform a water head massage, applying the dome is not required.



#### **Frequently asked questions:**

1. What if the water does not circulate or the pressure is too low?
  - Make sure the water level is 5 cm above the filter
2. What to do when the bowl drains poorly or does not drain at all?
  - Open the filter cover and remove accumulated hair or other debris. Remember to clean the filter regularly.
3. What to do when there is no water circulation?
  - It is possible that the cable is incorrectly connected. Check the manual and correct the cable so that it is connected correctly. If the problem persists, contact the service center.

#### **Attention!**

1. Check that the voltage matches the specifications of the device.
2. Do not use a wet hand to connect or disconnect the power source.
3. Do not damage the wiring or tamper with the circuit.
4. Do not use a wet cloth to clean the power switch, plug and other electrical parts of the appliance
6. Ensure that children do not play near the recliner without adult supervision.
7. Do not put your hand or foot in the crevices of the recliner.
8. Make sure the plug is plugged in all the way so that it is fully inserted into the outlet, otherwise it may cause electric shock or fire due to overheating.
9. In case of abnormalities or malfunctions, immediately stop using and disconnect the power supply.
10. Do not expose the couch to direct sunlight.

11. Do not push or pull the recliner on an uneven floor.
12. Do not stand on the couch.
13. Adjust the backrest back to the highest position before lowering the recliner.
14. Do not place the unit in wet places such as the bathroom to avoid electric shock or other malfunctions. The remote control should also be protected from contact with water.
15. Do not place the unit in areas where painting or varnishing work is taking place or oxygen is being used.
16. The device should not be used by people with physical limitations, sensory impairments, mental problems or inexperience.
17. If the plug is damaged, contact your distributor, service center or qualified personnel to avoid danger.

### **Attention.**

The bed has a closed water circuit. In order to maintain the cleanliness and full functionality of the device, the used water must be removed after each treatment and the circuit flushed. To do this, let the used water out of the bowl, then fill the bowl with clean water and turn on the device for several tens of seconds. Repeat the operation twice. After finishing the treatment, it is recommended to wash and wipe dry parts sensitive to water or agents used during treatments. Neglecting this procedure can lead to damage to the couch such as damage to the seals or the formation of mold.

### **Specifications:**

- Motor power: 60 W
- Output voltage: 110-240 V
- Motor with a thrust force of 6000 N
- Control mode: Remote control
- External components: acrylic housing
- Number of motors: 3 motors
- Lifting and lowering range: 56-82 cm
- Weight: 200kg

### **SAFETY MEASURES**

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the unit from the outlet and contact an authorized service center provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the unit, b) the unit emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the unit has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

**CAUTION:**

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unsupervised when children or persons without sufficient knowledge in the use of the appliance are near it.

This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

**DISPOSAL OF THE DEVICE**

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment should be collected

separately, and then transfer them to collection points for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

**STORAGE AND TRANSPORT**

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.