

ACTIVESHOP[®]

Instructions for use

ELEGANTE 10 towel warmer



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland

www.activeshop.com.pl

 
Rev. A/05/2025



Scan for
different
languages



Structure of the heater

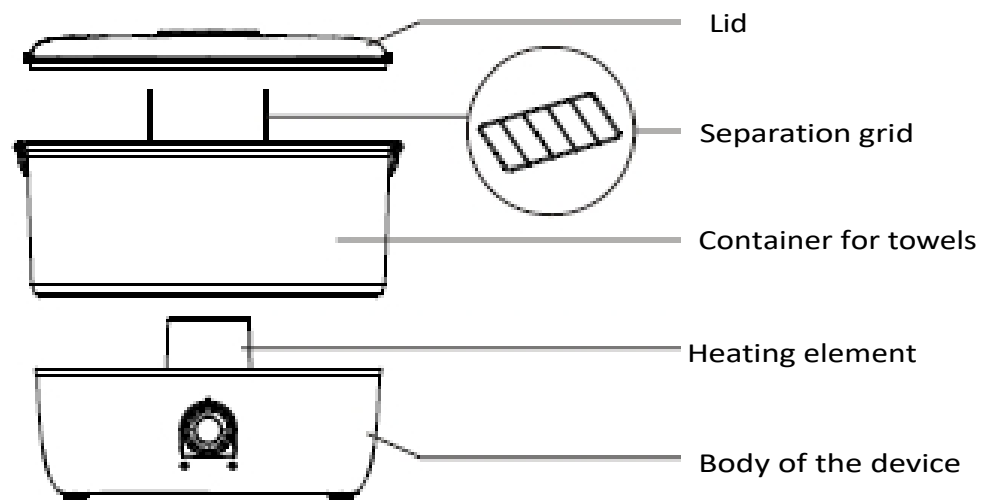

Functions:

 
1. Steam sterilization
2. Rapid heating, steam in 10 seconds
3. Automatic protection against running out of water, bi-directional temperature control system for greater safety
4. Large capacity - can heat about 18 30× 30 cm towels at a time
5. Advanced design to reduce noise
6. The body of the unit can be stored in the towel holder

Usage:

1. Roll up the towel, put it in the container, then put the lid and block with handles on both sides.




2. Pour water into the main compartment. Make sure that the water level is between the "MIN" and "MAX" markings. Make sure the Energy Focusing Ring is in place.

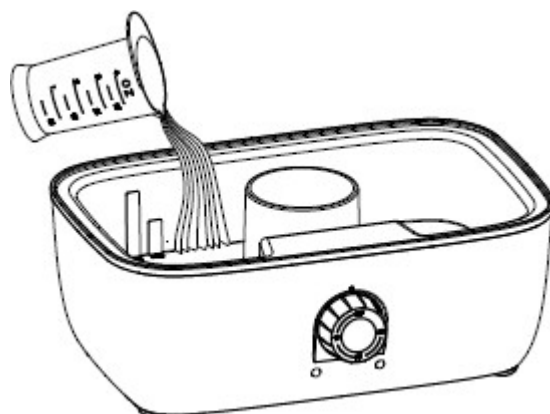

3. Place the towel container correctly on the body of the device, then connect the power cord.



 4. Use the knob to set the operating time. The device will start heating the towels.

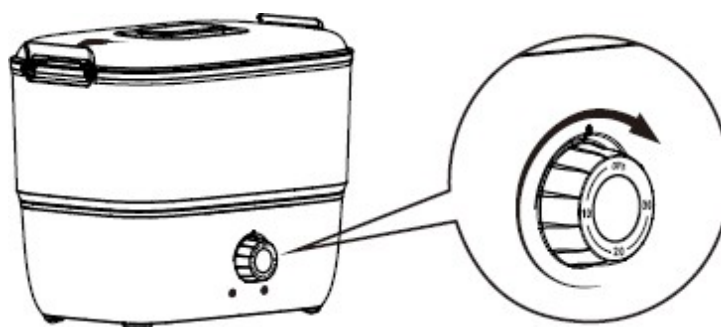

No water

The red and green indicator lights illuminate when the device is working properly. If the red light goes out, it means there is no water, which must be refilled. If this is not possible, for safety reasons, please turn the knob to the position "OFF."

Note

- Do not use the device for purposes other than its intended use.
- Do not touch hot surfaces - use handles or knobs.
- To avoid electric shock, do not immerse the cord, plugs or the appliance itself in water or other liquids.
- Unplug the unit when not in use and before cleaning. Let it cool down before attaching or removing parts.
- Do not use the device if the cord or plug is damaged, or if the device does not function properly or has been damaged in any way.
- Use of accessories or add-ons that are not recommended or sold by the manufacturer may lead to injury.
- Do not use outdoors. The device is intended for indoor use only.
- Do not let the cord hang from the edges of tables or countertops, and avoid contact of the cord with hot surfaces.
- Take special care when the device is used by or near children.

To avoid potential hazards:

- If the supplied power cord is damaged, it must be immediately replaced by the manufacturer or its representative.
- The device is not designed to be operated with an external timer or remote control system.
- The surfaces of the appliance accessible from the outside may reach high temperatures during or immediately after operation.
- When using an extension cord, its marked electrical parameters should be at least equal to those of the appliance.

Technical data

Rated voltage	120V / 220V
Rated power consumption	600W
Rated frequency	60Hz / 50Hz
Water tank capacity	1 L
Adjustable time range	0~30 min
Heating temperature	212 °F
Overall dimensions	29.7 x 18.8 x 23.9

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so, so that no liquids get into the device.
4. Immediately remove the plug from the socket and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the unit on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will help avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then

transfer to collection points for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORTATION

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

