

ACTIVESHOP[®]

Instructions for use

ELEGANTE 21 towel warmer



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland

www.activeshop.com.pl

 
Rev. A/05/2025



Scan for
different
languages



Construction of the device:

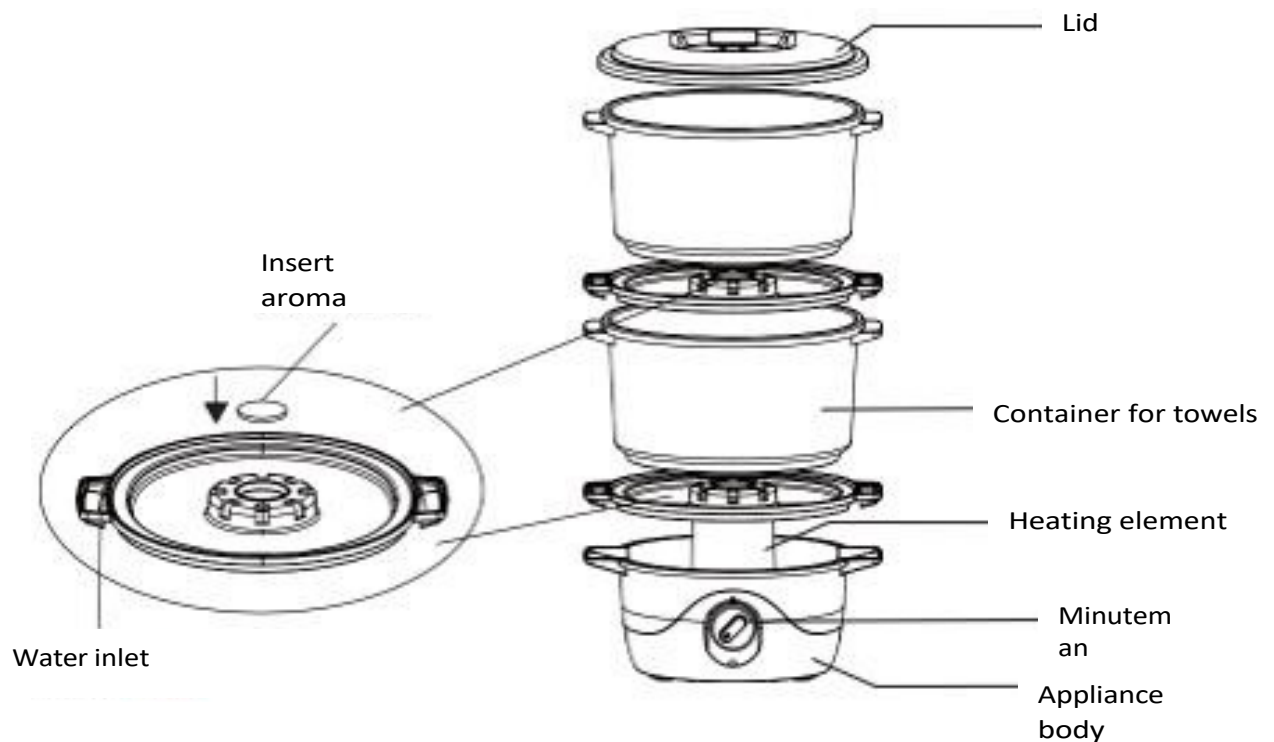

Device features:


1. Steam sterilization - kills 99% of bacteria through high temperature.
2. Aromatherapy function - makes towels fragrant, eliminates unpleasant odors.
3. Quick heating - ready to use in 10 seconds.
4. Transparent water tank - easy control of water level.
5. Large capacity - holds up to 18 face towels (30× 30 cm).
6. Condensation tray - prevents water from dripping into the tank.
7. Easy operation - 30-minute timer.

Usage:


1. Roll the towels, then place them in the container designed to hold them and put the lid on.




2. Pour in the water. You can pour it both from the top and through the side inlets. The water level should be between the "low" and "high" indicators. Make sure that the heating element is in place

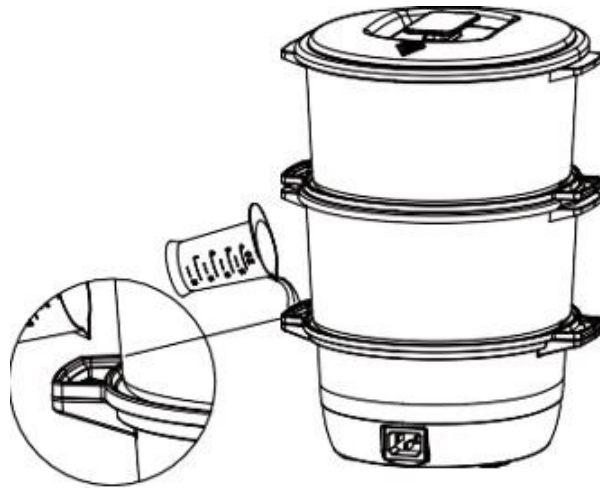


3. Place a cotton ball in the center of the condensation tray, then apply a few drops of essential oil to the cotton ball. The aroma will be released as it heats up.

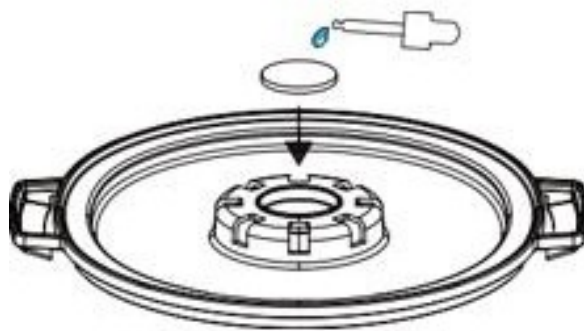


4. Place the towel container correctly on the body of the unit and the condensation tray, and then connect the power cord.

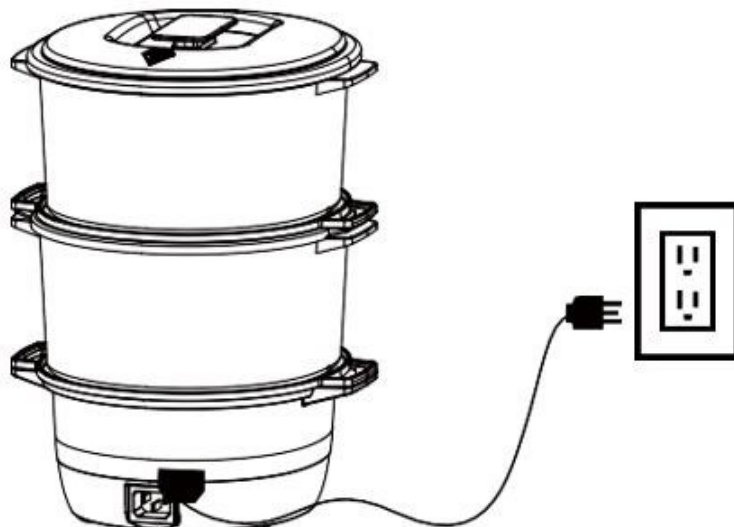


5. Adjust the knob to set the desired heating time. The LED indicator will light up and the unit will start heating. Depending on the volume of water, it will start producing steam in 10-20 seconds.

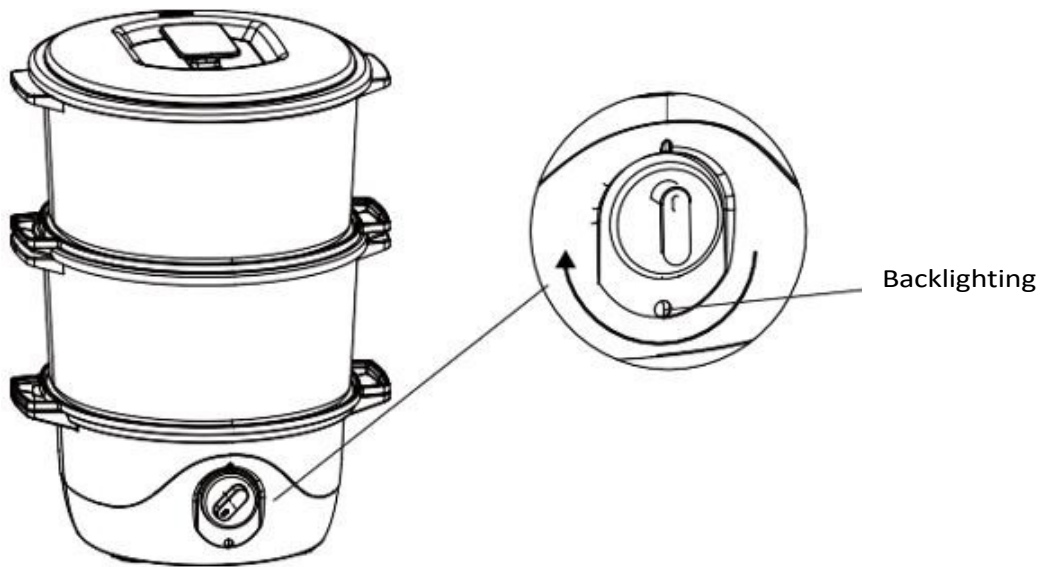

6. The red light will illuminate when the unit is operating properly. When the water runs out, the indicator light will go out. To resume operation of the device, add water.

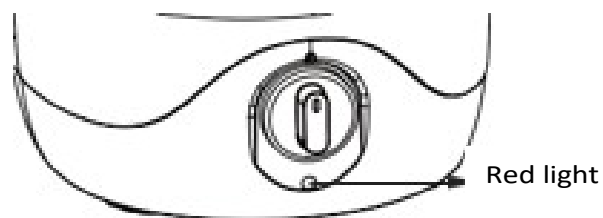

7. Clean the condensation tray after each use. Wait for the device to cool down before removing it.

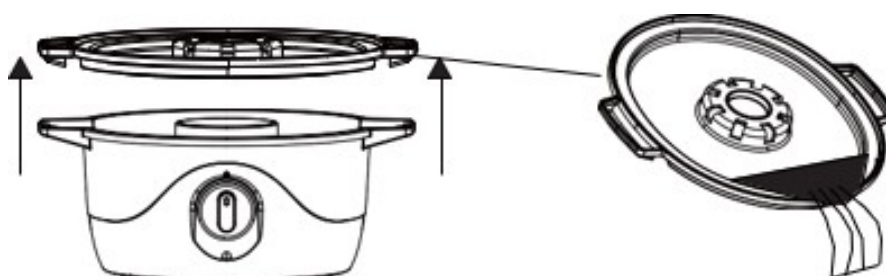

Caution.

- Do not use the device for purposes other than its intended use.
- To avoid electric shock, do not immerse the cord, plugs or the device itself in water or other liquids.
- Unplug the device when not in use and before cleaning. Let it cool down before attaching or removing parts.
- Do not use the device if the cord or plug is damaged, or if the device is not working properly or has been damaged in any way.
- Using accessories or add-ons that are not recommended or sold by the manufacturer may lead to injury.
- Do not use outdoors. The device is intended for indoor use only.
- Do not let the cord hang from the edges of tables or countertops, and avoid contact of the cord with hot surfaces.
- Take special care when the device is used by or near children.

To avoid potential hazards:

- If the supplied power cord is damaged, it must be replaced immediately by the manufacturer or its representative.
- The unit is not intended to be operated by an external timer or remote control system.
- Externally accessible surfaces of the device may reach high temperatures during or immediately after operation.
- When using an extension cord, its marked electrical parameters should be at least equal to those of the appliance.

Attention!

Please **DO NOT touch** the hot surface and be cautious of the hot steam coming out of the two water inlets on either side.



Specifications:

Rated voltage	120V / 220V-240V
Rated power	600W
Rated frequency	60Hz / 50Hz
Water tank capacity	0.8L
Operating time	0~30min
Overall dimensions	23.88 cm x 22.86 cm x 31.24 cm
Heating temperature	100°C

SAFETY MEASURES

1. The device is a professional equipment for use in cosmetic surgeries. Use of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years of age and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.

3. The equipment is not intended for play by children. Do not allow children to play with the equipment.

4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.

5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for the disposal of this type of equipment

equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORT

The device should be transported at temperatures in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.